 
 
 
 
 
 
 
 
 
 
 
 
 


CASSIDY



Part List

AA		X1
AB	Headboard & Footboard	
B		X2
	Side Rail	
C		X4
	Leg	
D		X4
	Corner Block	
E		X5
	Support Leg	
F		X1
	Center Rail	
G		X1
	Slat	


Hardware List

H		X16
	JCBC M6 X 50 MM	
I		X5
	JCBB M8 X 70 MM	
J		X16
	Flat Washer M6	
K		X8
	JCBB M8 X 50 MM	
L		X8
	JCBB M8 X 16 MM	
M		X8
	Flat Washer M8	
N		X26
	CSK M4 X 30 MM	
O		X5
	Adjuster Screw	
P		X2
	JCBC M6 X 30 MM	
Q		X5
	Barrel Nut M8 X 18MM	
R		X1
	Allen Key M4	
S		X1
	Allen Key M5	


 
 
1

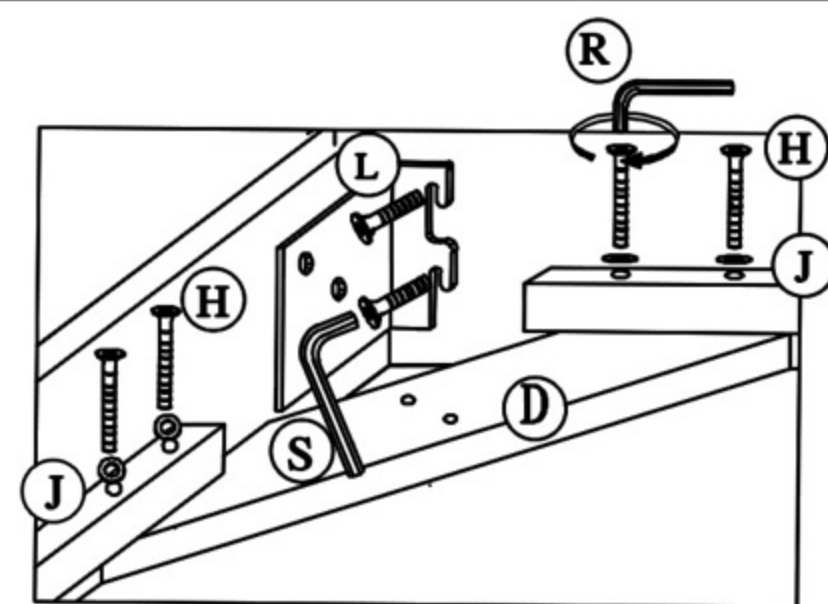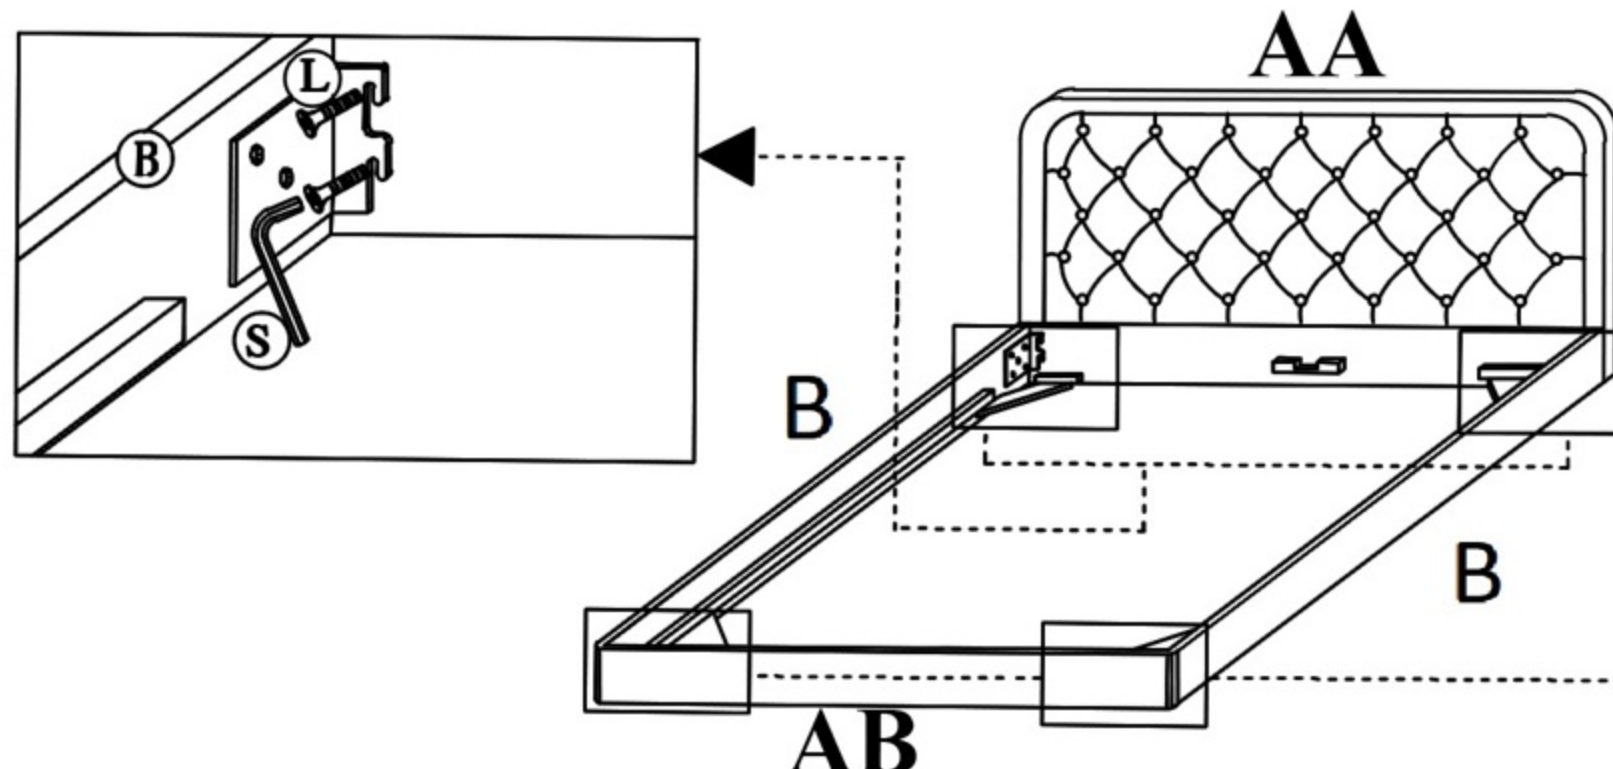

2

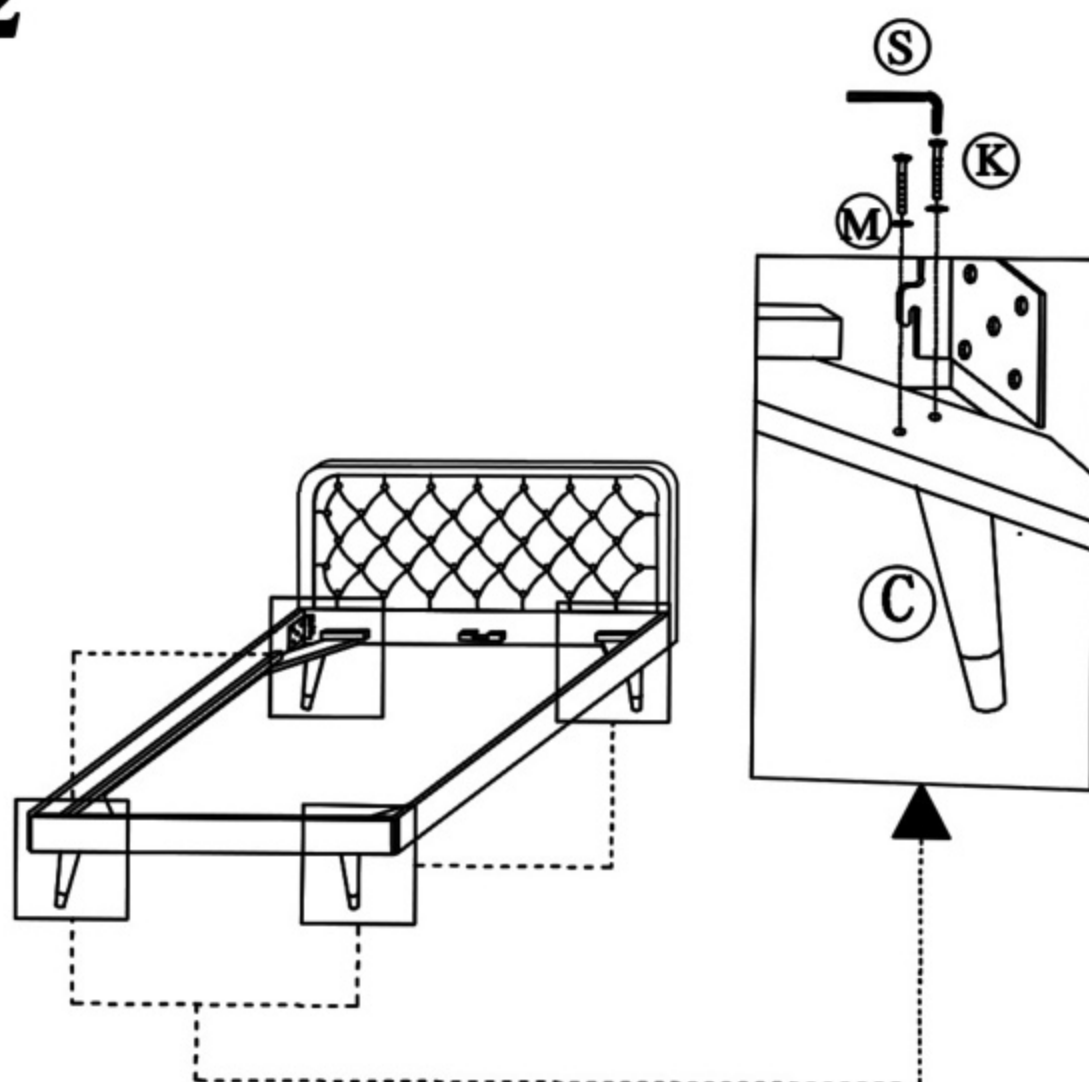 

3

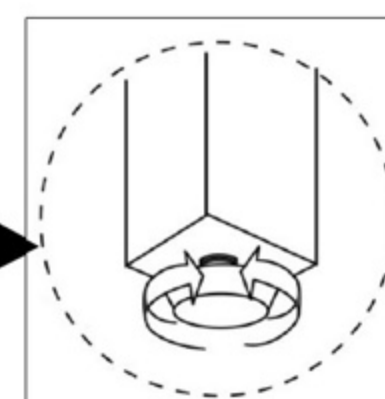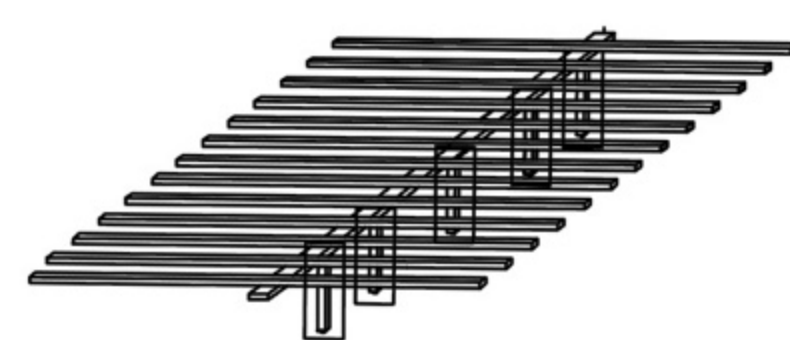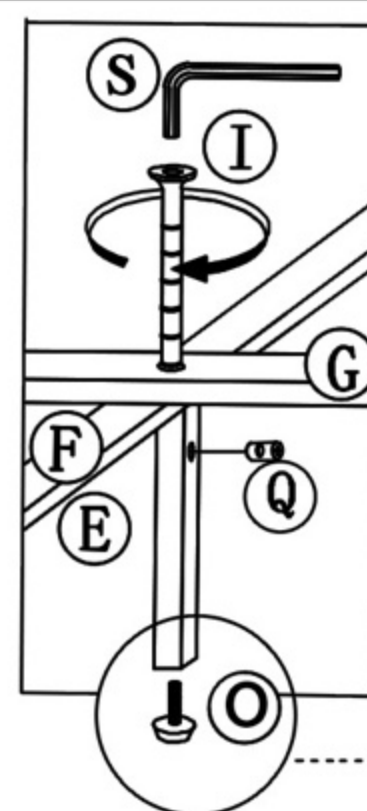   





UWAGA !!!

Należy ustawić łóżko w finalnym położeniu, następnie wyregulować śrubę O w nodze tak aby miała styczność z podłogą. Nie należy przesuwac łóżka po zamontowaniu nogi E.

WARNING!!!

Please align bed to a preference placement, and please make sure that bed leg Adjuster Screw (O) are clockwise or counter clockwise until it is firmly against the floor. Please don't move the bed, after (E) completely install.

    4

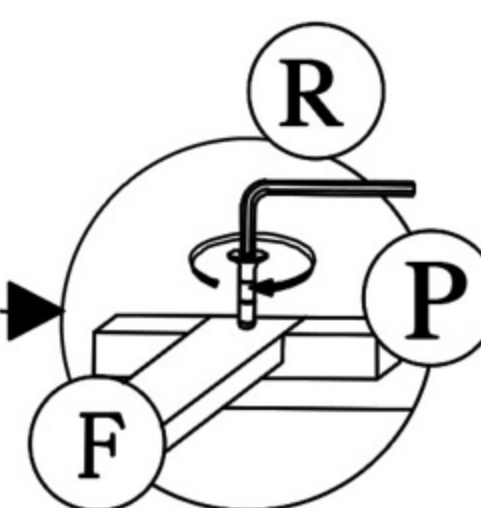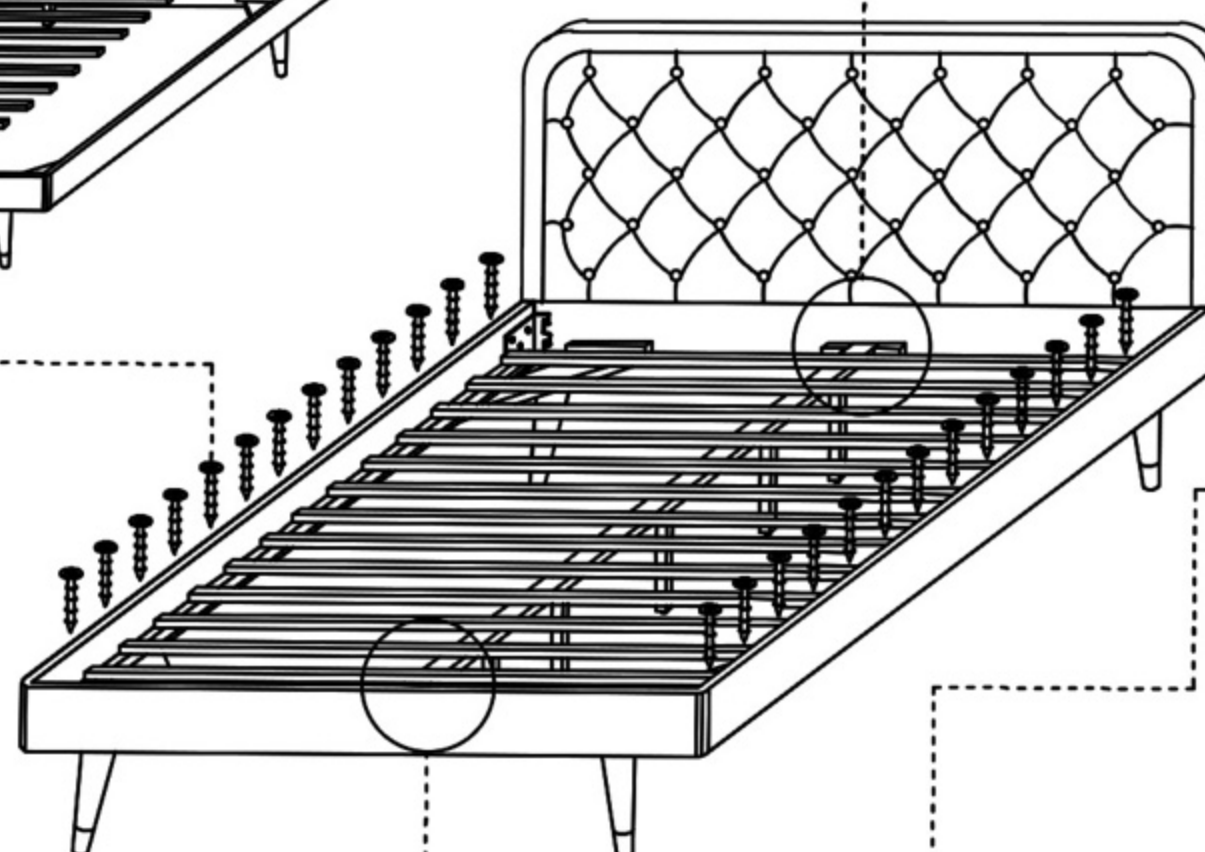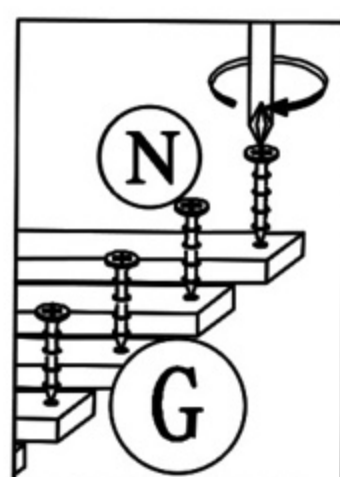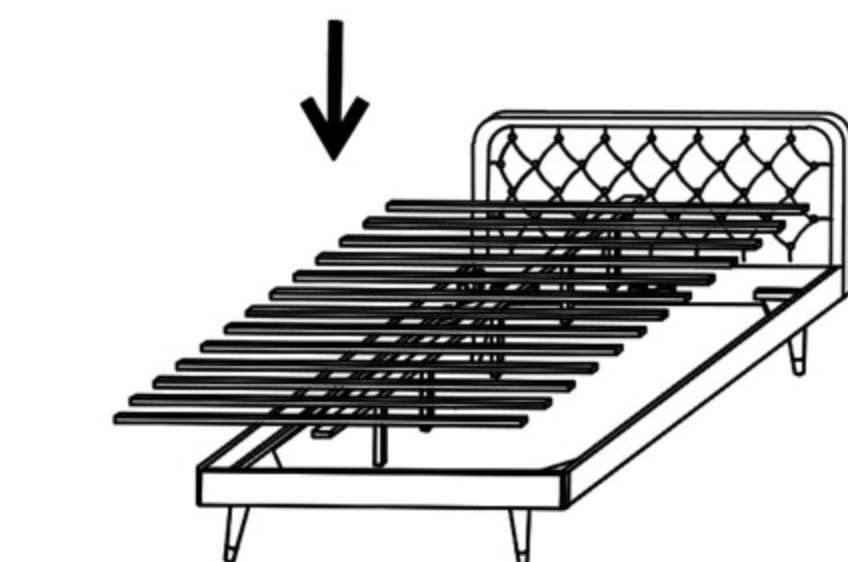

COMPLETED
ASSEMBLY

HALMAR SP.z o. o .

ul. Centralnego Okregu Przemyslowego 2, 37-450 Stalowa Wola, POLSKA / POLAND
tel.+48 15 843 28 10, fax:+48 15 842 19 57 , e-mail: office @halmar .com.pl

v.3