



K563


1

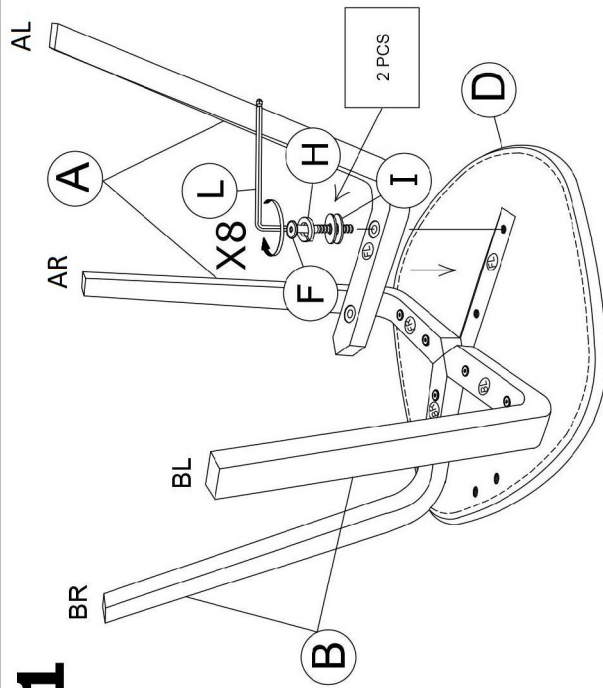

2

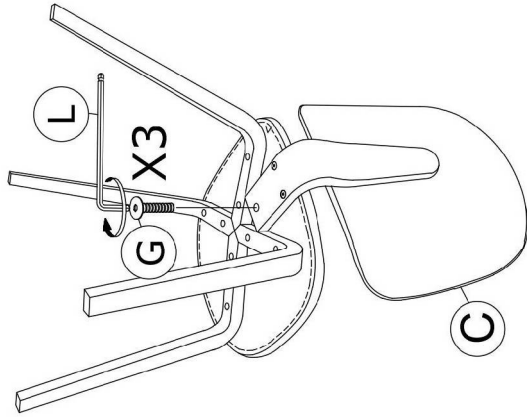

3

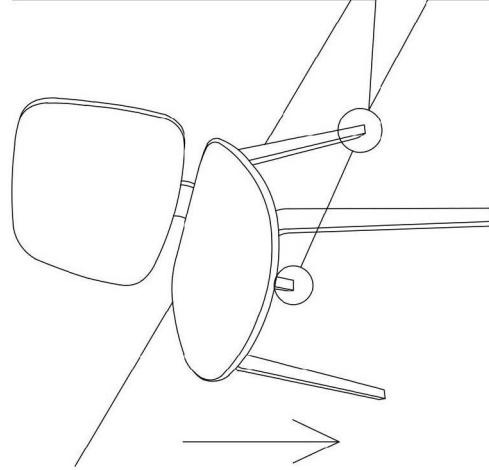


* Put a chair on to flat surface or floor & checking all leg touch the floor or surface. If not, flat washer need to apply either once left or right leg at the back side only. Refer step 4 for next instruction method.

Należy postawić krzesło na płaskiej powierzchni, a następnie sprawdzić czy wszystkie nogi stykają się z podłogą. Jeśli nie, należy przejść do kroku 4.

4

Należy odkręcić nogę a następnie dodać podkładkę I.

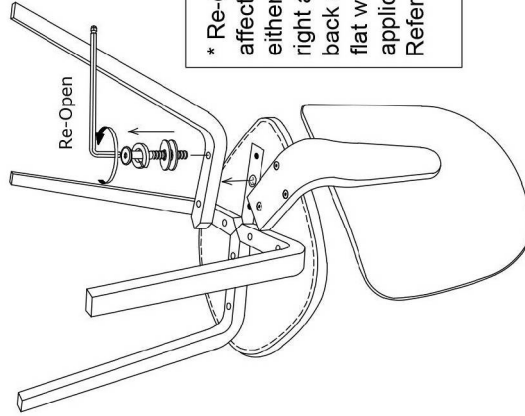

* Re-open the affected leg either left or right at the back side for flat washer application. Refer step 5.

A	CHAIR LEG (AL/AR)	1+1
B	CHAIR LEG (BL/BR)	1+1
C	CHAIR BACK	1
D	CHAIR SEAT	1
E	CORNER BLOCK	2
F	JCBC BOLT M6 X 40MM (BLK)	8
G	JCBB BOLT M6 X 30MM (BLK)	3
H	SPRING WASHER 5/16" (BLK)	8
I	FLAT WASHER M8 X 18MM (BLK)	16
J	FLAT WASHER 5/16" (BLK)	3
K	PH M4X32MM (BLK)	6
L	ALLEN KEY M4 (BALL SHAPE)	1
M	ADJUSTABLE SCREW 6 X 16MM	4 PCS


HALMAR Sp. z o.o.

ul. Centralnego Okręgu Przemysłowego 2, 37-450 Stalowa Wola, POLSKA / POLAND
tel. +48 15 843 28 10, fax: +48 15 842 19 57, e-mail: office@halmar.com.pl

v.2

1

5

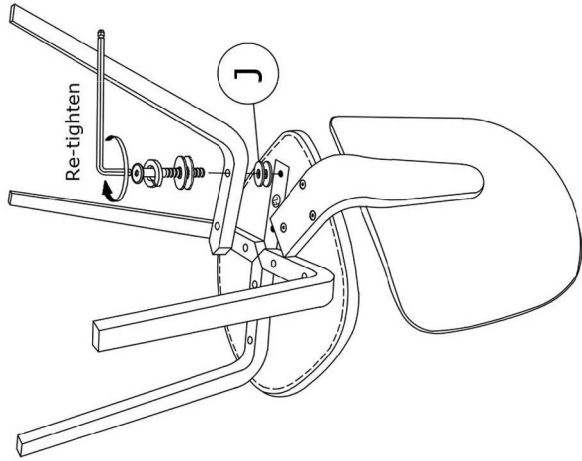


* Apply a flat washer at bottom of the leg affected.




7

ADJUSTABLE SCREW 6 X 16MM

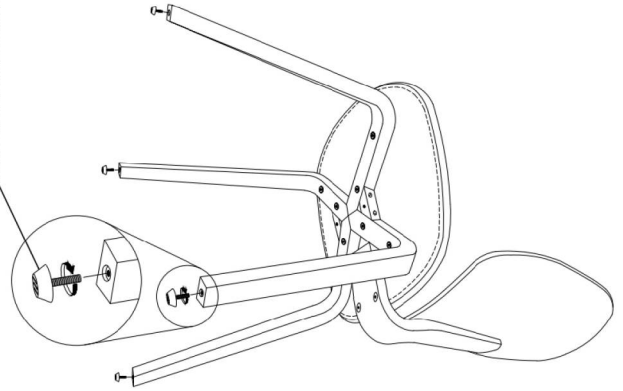

6

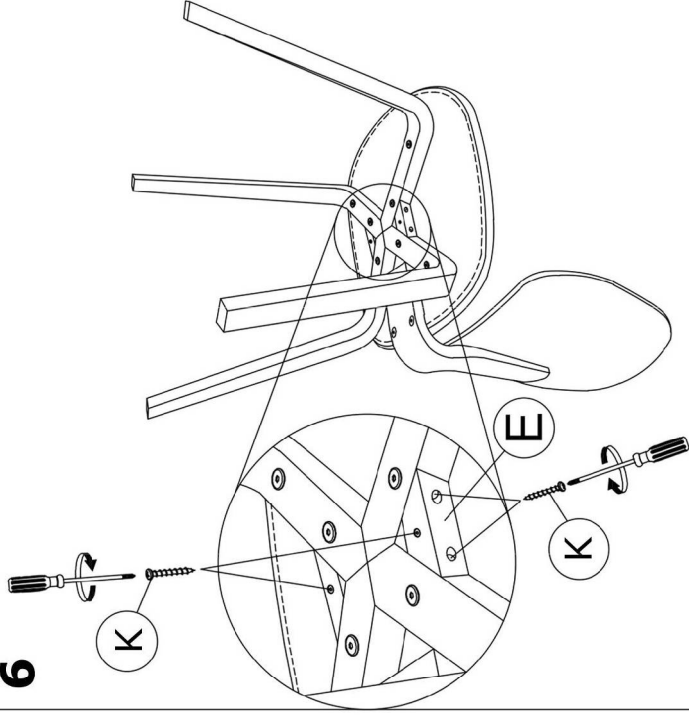

 max. **100 kg**

