



# ASSEMBLY INSTRUCTION 7423C

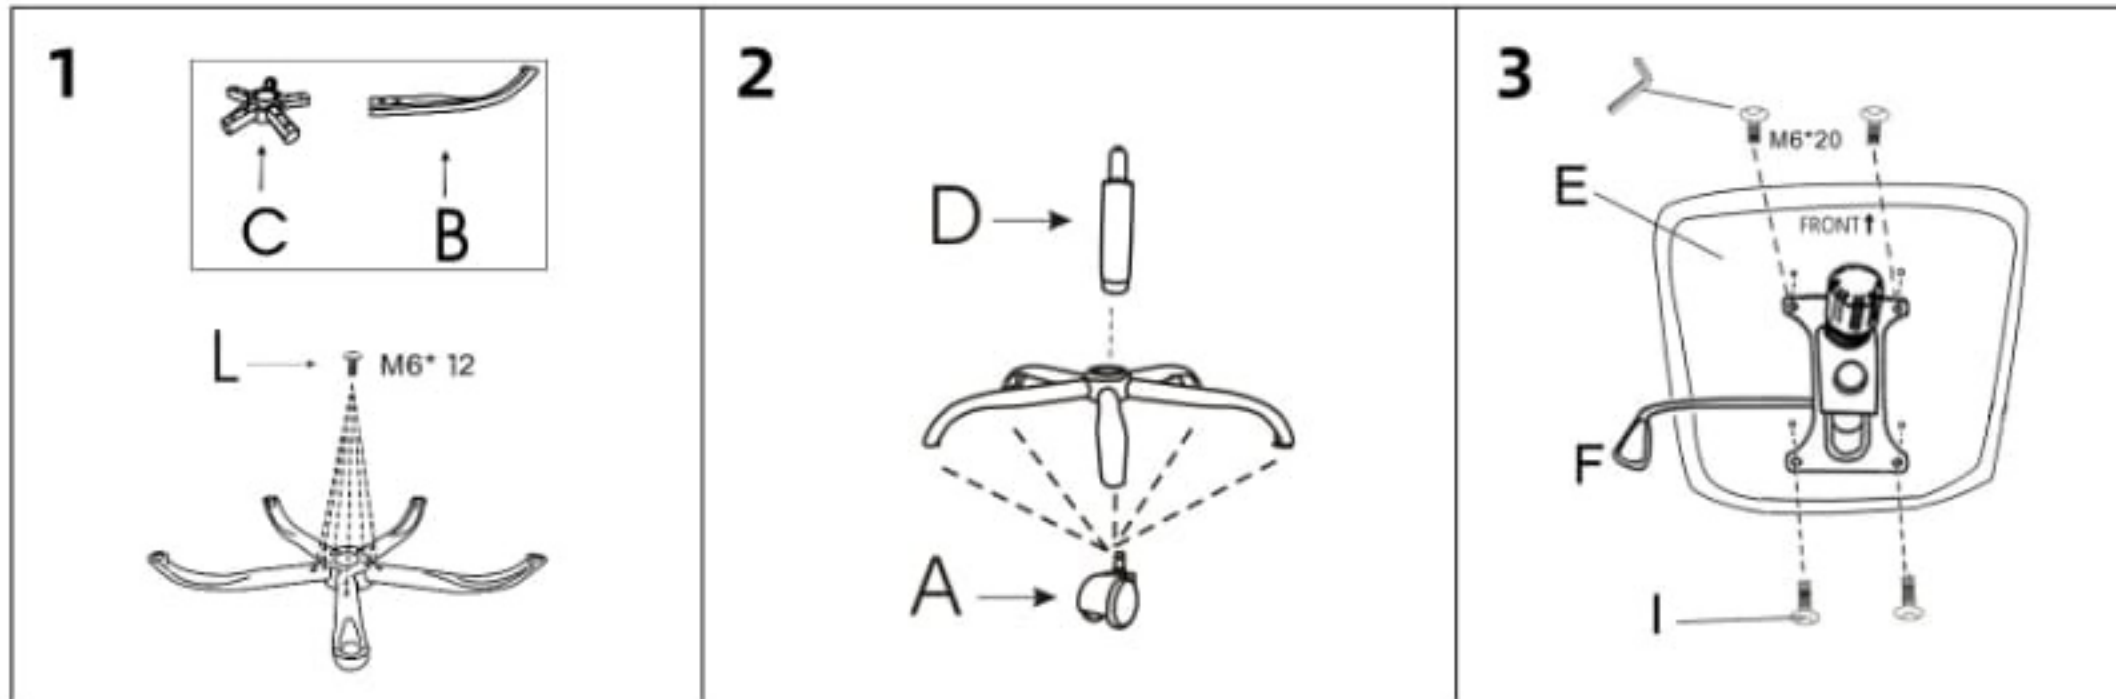

**NOTE:** We provide a one-year free warranty for the entire product. Any questions, please contact us ([yamasoro@jestelgroup.com](mailto:yamasoro@jestelgroup.com)).

**NOTE:** The arrow points to the edge of the seat. (when you seat, the control handle is on your right hand side.)

**NOTE:** Don't tighten the screws one by one. Try to align them first and tighten a few screws slightly. Then align the rest again and tighten them all.

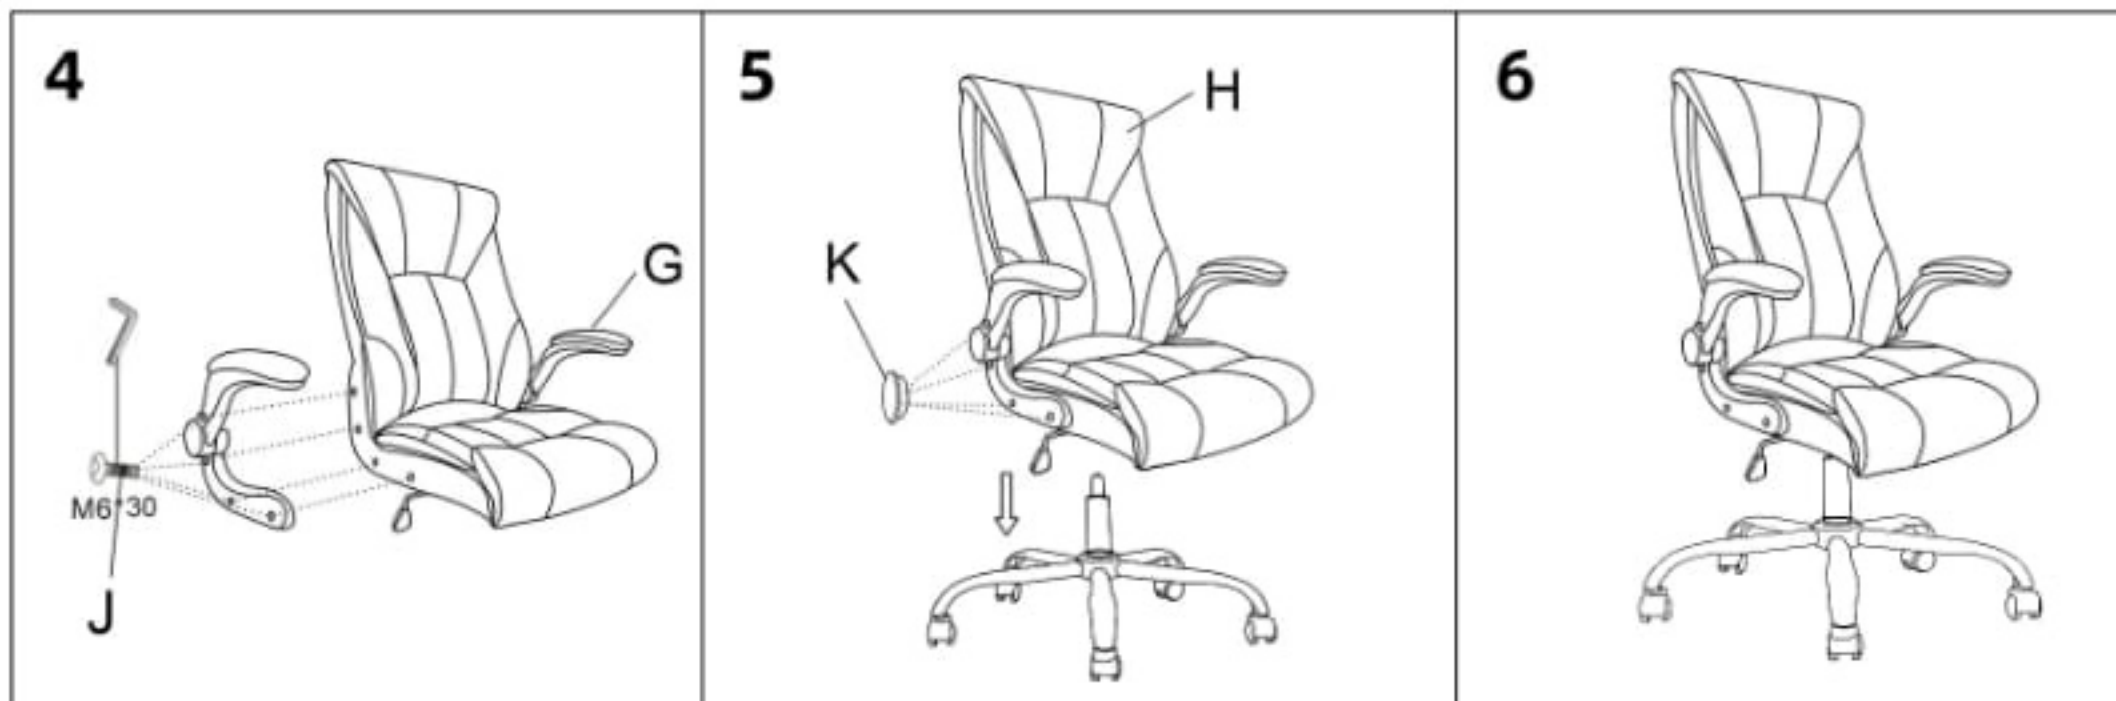

A		5PCS
B		5PCS
C		1PC
D		1PC
E		1PC
F		1PC
G		1PAIR
H		1PC
I		4PCS
J		8PCS
K		8PCS
L		12PC
M		1PC

**SGS**  
**Test Report** No.: AJHL1712004550FT Date: JAN 18, 2020 Page 2 of 2

Test Conducted: ANSI/BIFMA X5.1 -2020 General-Purpose office chairs -Tests

Test Item	Test Principle & Requirement	Test Result
Swivel Test - Cyclic (Clause 8)	There shall be no loss of serviceability after 120,000 cycles of rotation with a 122kg (270lb.) load on the seat (for the seat height is adjustable, test 60,000 cycles in its highest position then 60,000 cycles in its lowest position).	PASS
Seating Durability Tests - Cyclic (Impact Test) (Clause 10.3)	There shall be no loss of serviceability after a 57kg (125lbs.) weight free falls onto the seat from 36mm (1.4in.) height for 100,000 cycles.	PASS

**Remark:**  
 1. Test was performed after attaching the gas lift to a chair.

SGS authenticates the photos on original report only  
 \*\*\*End of Report\*\*\*

**SGS**  
 9000 Rue de la Paix, 1000 Brussels, Belgium  
 Tel: +32 (0) 2707 0800 Fax: +32 (0) 2707 0801  
 Email: [info@sgs.com](mailto:info@sgs.com) [www.sgs.com](http://www.sgs.com)  
 Member of the SGS Group since 2005

- All gas cylinders are all class 3 gas cylinder and conform to the BIFMA and SGS standards.
- After a long period of use, all the gas cylinder of office chairs may leak, and then causes the seat of the office chair to slowly descend. This problem is difficult to avoid.
- Please don't worry, we have prepared the spare gas cylinder in advance. If you have any questions, you can contact the seller on the order page or contact us by email ([customer-service@jestelgroup.com](mailto:customer-service@jestelgroup.com)) at any time.